




Manuale di istruzioni
Instruction book
Mode d'emploi
Bedienungsanleitung

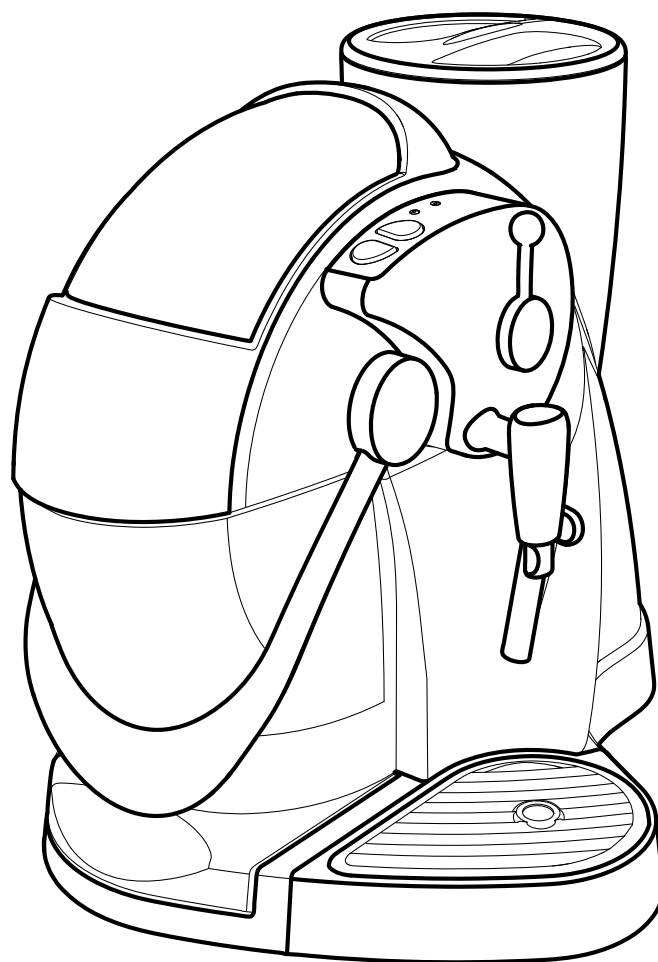

Deutsch
Français
English
Italiano

Model S01HS / P01HS



Introduction

●	Intended use	27
●	Warning symbols.....	27
●	Safety warnings	28
●	Instructions for use and disposal	29
●	Your Caffitaly System contact	29
●	Description of machine components	30

Installation

1	First use or after a long period of disuse	31
2	Turning on the appliance.....	32
3	General operating indications.....	33

Dispensing the product

4	Dispensing coffee.....	35
5	Dispensing filter coffee	36
6	Dispensing other beverages	38
7	Dispensing hot water	39
8	Preparing cappuccino / Dispensing steam.....	40

Cleaning and Maintenance

9	Daily maintenance	42
10	Descaling	43
11	Changing the gasket	47

Miscellaneous

12	Troubleshooting	48
13	Technical data	49

Dear Customer,

Thank you for having chosen our product and for your confidence in our company. You can savour your favourite hot beverages at any time of the day with our appliance by choosing one of the capsules that Caffitaly offers you. For example: An espresso, a cocoa-flavoured beverage or a tea will be ready in just a few seconds.

Intended use

This appliance is intended to be used in domestic and similar applications such as, for example:

- staff cooking areas in shops, offices and other work environments;
- holiday farms;
- by guests staying at hotels, motels and other residential facilities;
- facilities like bed and breakfasts.

Use only Caffita System capsules. Use of the appliance in any manner other than as directed herein could cause harm to persons and void the guarantee.

The manufacturer will not be responsible for injury or damage resulting from improper use of the appliance.

Warning symbols



CAUTION

This is the safety warning symbol. It is used to call your attention to possible risks of personal injury. Abide by the safety messages provided in order to avoid possible injury or death.



NOTE

This is the symbol used to highlight some actions that will optimise use of the appliance.



Not dishwasher safe



Maintenance tips



This symbol is used to highlight a **GREEN** light indication.



This symbol is used to highlight an **ORANGE** light indication.



This symbol is used to highlight a **BLUE** light indication.



This symbol is used to highlight a **RED** light indication.

Safety warnings

Carefully read the following instructions! In this way you will avoid the risk of personal injury and damage to the appliance.

- After removing the packaging, check that the appliance is not damaged. If damage is found, or upon the first sign of a defect (unusual noise or odours), do not use the appliance and contact the Authorised Service Centre.
- The packaging elements (plastic bags, etc.) must not be left within reach of children as they are potential sources of danger.
- Only use the appliance if the power cord is intact. If the cord is damaged, it should be replaced: contact an Authorised Service Centre. Lethal danger of electric shocks.
- Only use and store the appliance indoors. Make sure the electrical elements, plug and cord are dry. Never submerge the appliance in water. Protect the appliance from sprays and drips. Water and electricity together constitute a risk of electrocution.
- Only connect the appliance to power outlets complying with the requirements of the law. Make sure that the power supply voltage matches the rating shown on the data plate on the bottom of the appliance.
- To avoid the risk of fire, set the appliance on a flat, heat-resistant surface. Do not leave the power cord hanging from the edge of the support surface.
- Do not allow the appliance to be used by children or persons with impaired mental, physical or sensory faculties or insufficient experience and/or skills, unless they are under the careful supervision and guidance of a person responsible for their safety. Children must be kept under supervision to prevent them from playing with the appliance.
- Do not leave the power cord near hot surfaces, sharp edges or other sharp objects.
- Never place your hands inside the capsule compartment. Danger of injury
- Always close the lever. Never open the lever while the appliance is operating.
- Never remove parts of the appliance. Do not insert objects into the openings. This could cause electric shocks! Any operation that is not described in this instruction manual should only be performed by an Authorised Service Centre!
- Do not pull on the power cord to disconnect it. Remove the plug to avoid damage to the outlet.

- Descale the appliance regularly, following the instructions provided. If you do not, the appliance may be damaged and may become harmful to your health.
- Clean the appliance carefully and regularly. If it is not cleaned, the build-up that forms may be hazardous to your health. Unplug the appliance and allow it to cool before cleaning.
- If you do not expect to use the appliance for a long period of time (leaving on vacation, etc.), unplug it.

Instructions for use and disposal



The appliance has been manufactured using high quality materials that can be reused or recycled. Dispose of the appliance in a suitable waste collection centre.




To rule out any abuse and dangers involved, ensure that the machine cannot be plugged into the mains before delivering it to the scrapping service. To achieve this, unplug the appliance from the outlet and cut the power cord as close as possible to the machine.



Directions for correct disposal of the product according to European Directive 2002/96/EC and Italian Legislative Decree no. 151 dated 25 July 2005. At the end of its useful life, the product should not be disposed of with unsorted household waste. It should be taken to a suitable selective waste collection centre set up by the local authorities or returned to a retailer who provides this service. Separate collection of an electric household appliance avoids a possible negative impact on the environment and health arising from improper disposal and enables the materials it is made of to be recovered so as to achieve significant savings of energy and resources. The crossed-out wheeled bin symbol applied on the product highlights the need to dispose of electric appliances separately. Improper disposal of the product by the user shall be subject to specific administrative sanctions as provided for under current regulations. The packaging is made from recyclable materials. Contact the competent authorities for information regarding local legislation.

Description of machine components

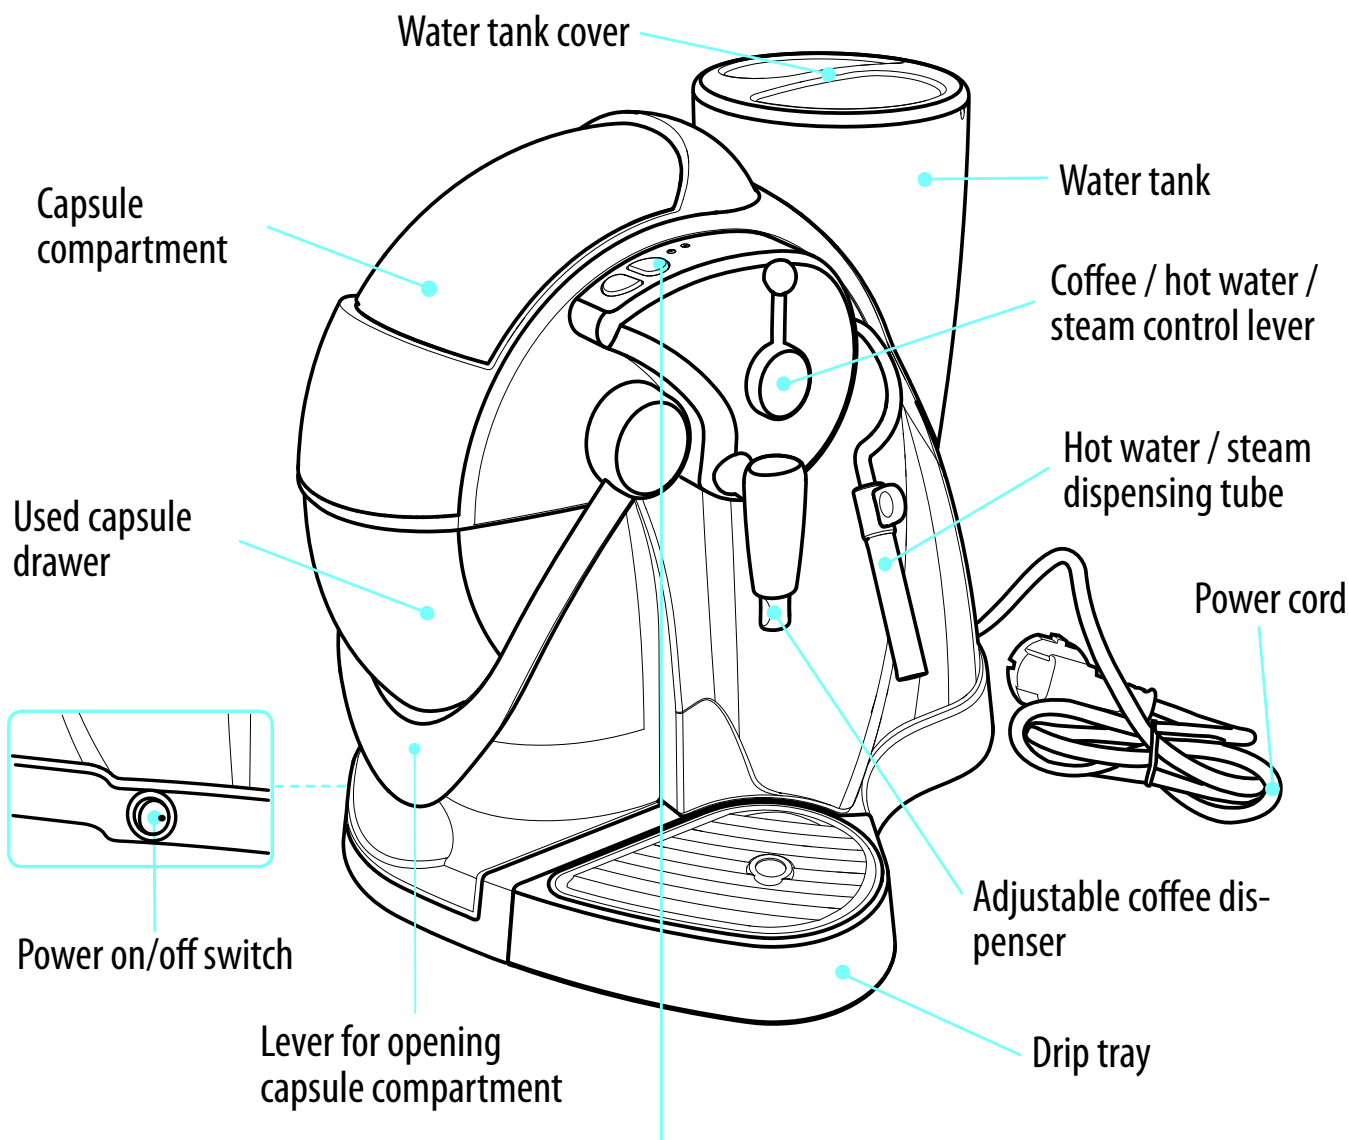

"Multifunction"
alarm

"Filter coffee"
indicator light


"Steam"
button

"Filter coffee"
button


Coffee position

Central
position (0)


Hot water /
steam position

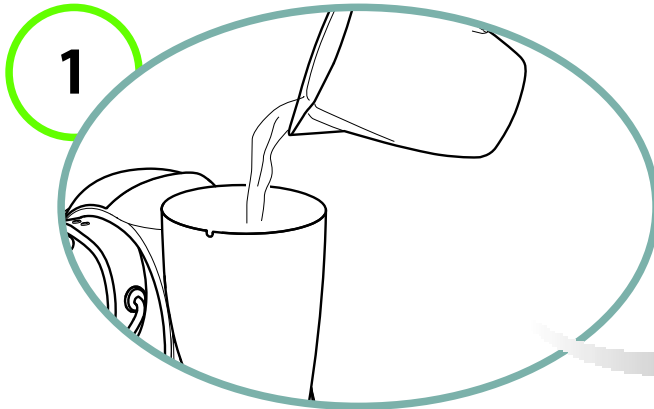


Fill the tank with fresh, still water.

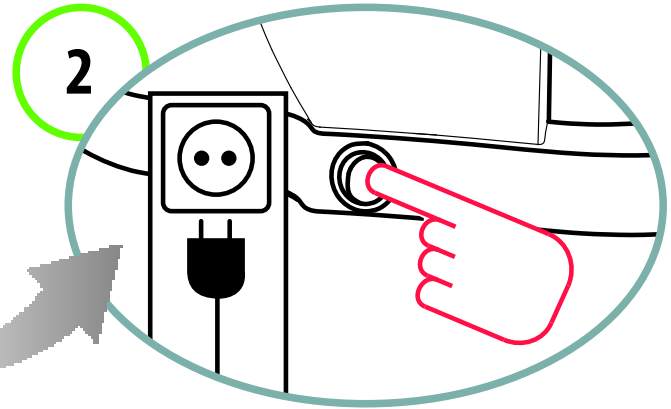


Plug in the appliance and turn it on.

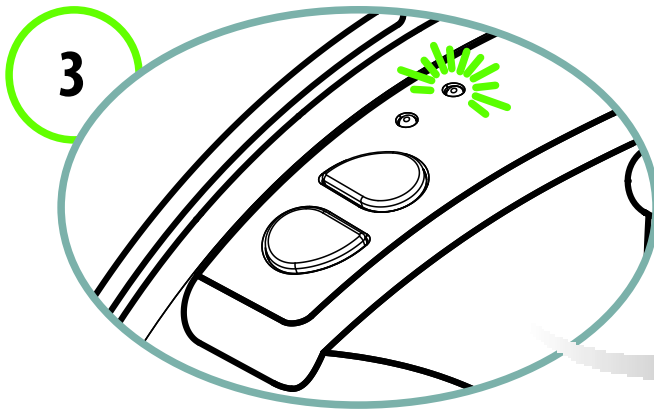


The **multifunction** indicator light blinks in GREEN. After approximately 1 minute, it becomes lit steadily and the appliance is ready to use.

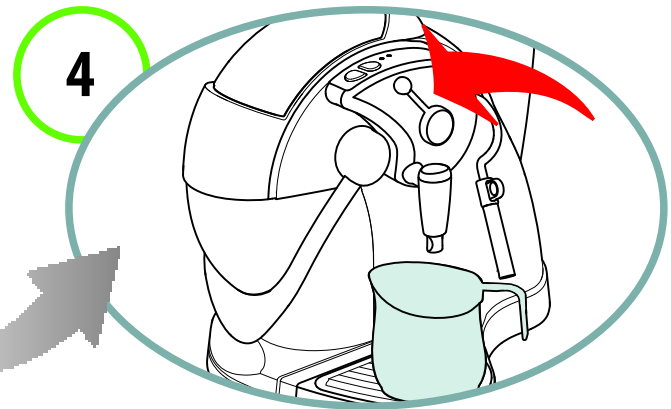

To fill the circuit, draw off approximately one glass of water from the coffee dispensing spout (without using a capsule), setting the control lever to the coffee position.

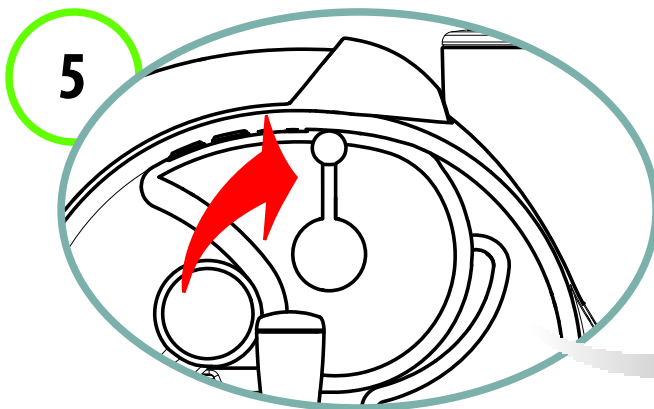


At the end of this step, set the lever back to its central position (0).

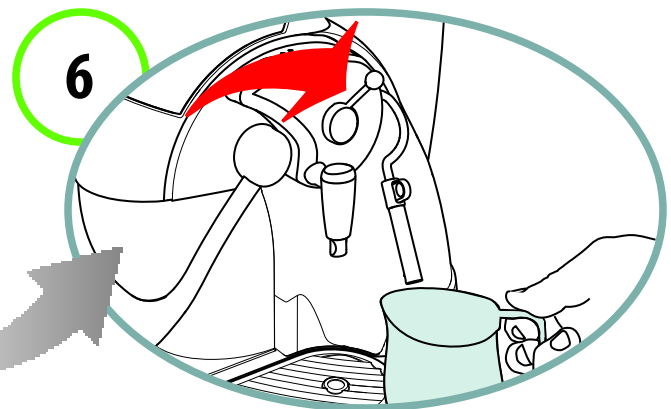


Flush the circuit by drawing off another glass from the hot water dispensing pipe, setting the control lever to the hot water position.

2 Turning on the appliance

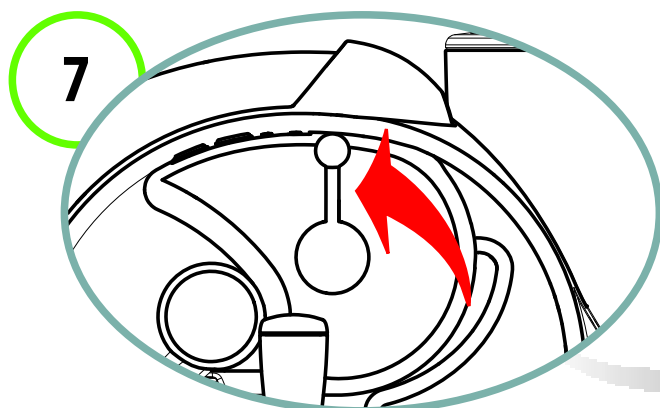


At the end of this step, set the lever back to its central position (0).

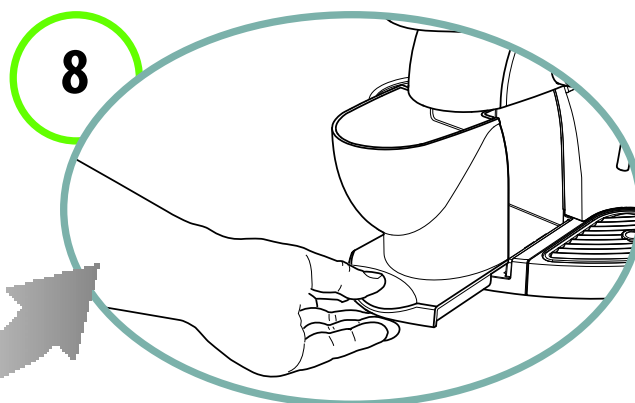


Empty the water from the used capsule drawer.

2 Turning on the appliance

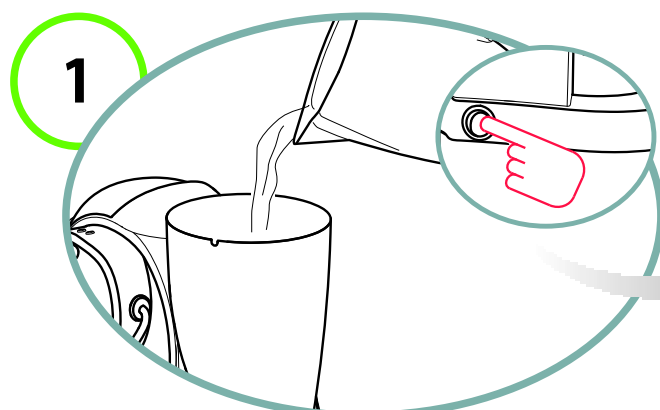


Fill the tank with fresh, still water. Turning on the appliance

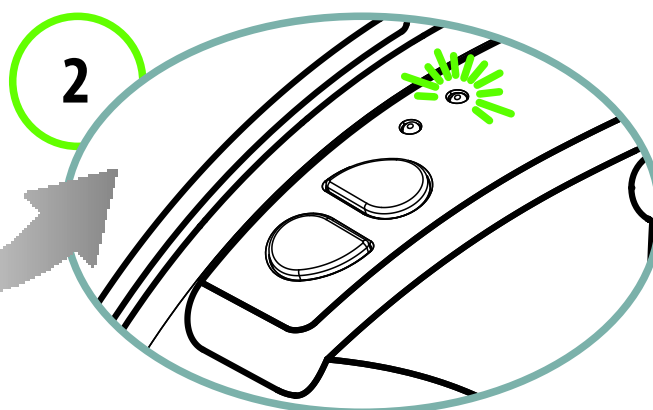


The **multifunction** indicator light blinks in GREEN. After approximately 1 minute, it becomes lit steadily and the appliance is ready to use.

Heating

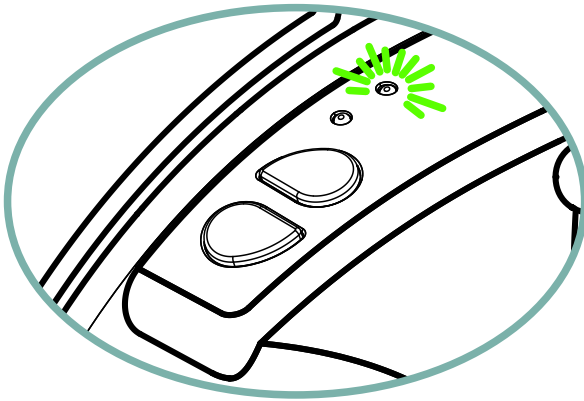


The multifunction indicator light blinks in **GREEN**.


When the water runs out during operation

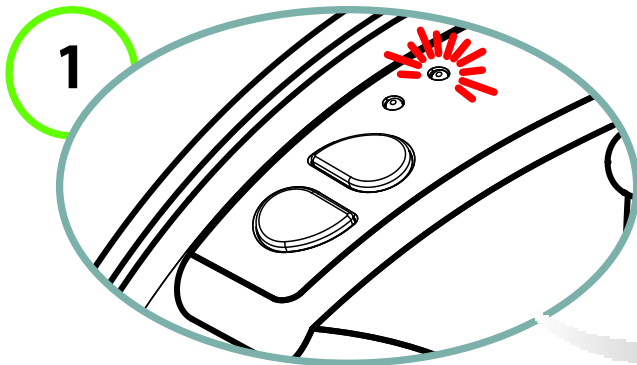


When the **multifunction** indicator light is lit in RED, the water tank is empty.

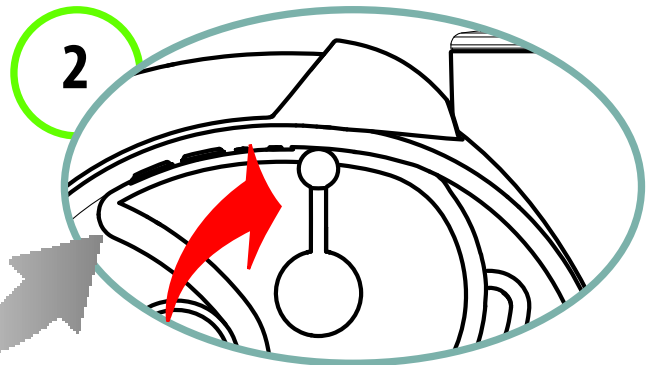

Set the control lever back to the centre (0).

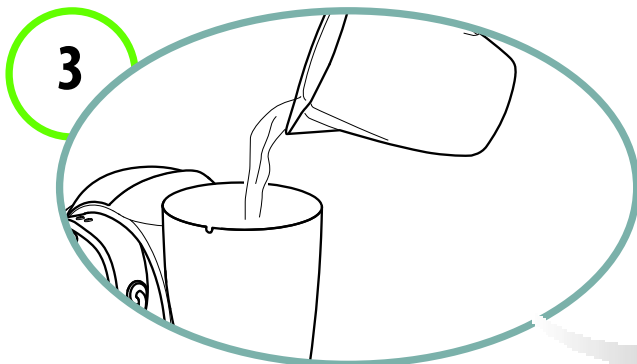


Fill the tank with fresh water.

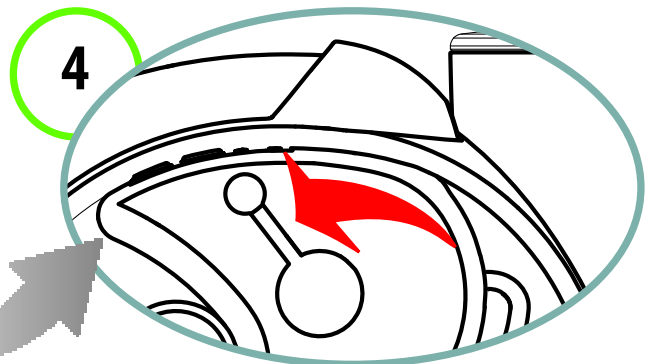


Set the control lever to the coffee position; the appliance will resume brewing.

If the lever is raised**CAUTION!**


Raising the lever incorrectly while dispensing a product may cause brief splashes of hot water.
Danger of scalding!

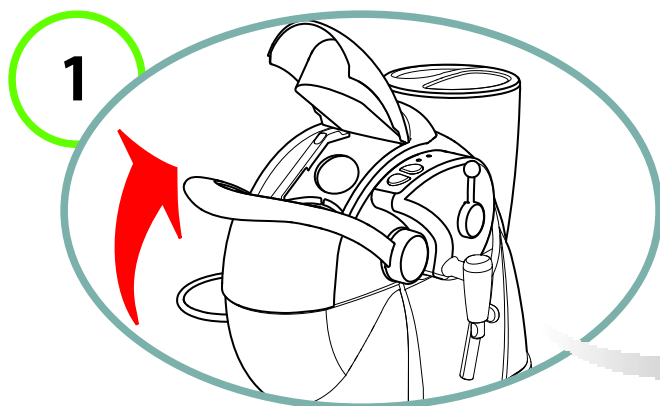


If the lever is raised while a product is being dispensed.

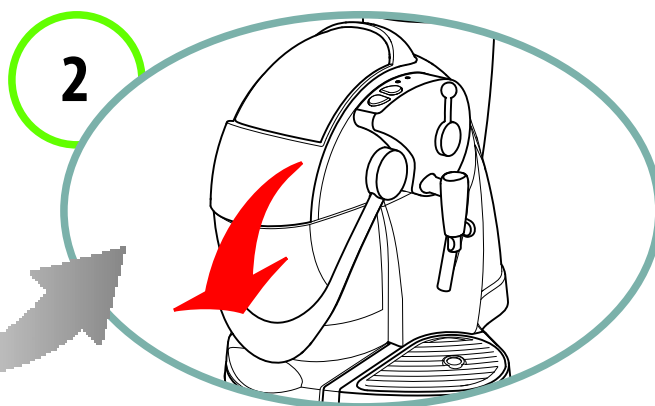


The appliance will immediately stop dispensing.
Close the lever.

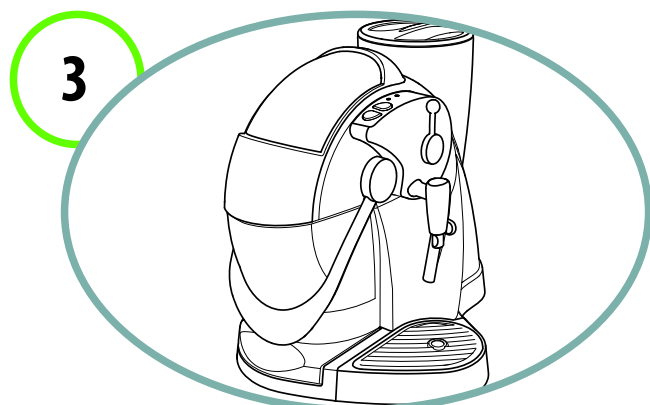


The appliance is ready for a new dispensing cycle.

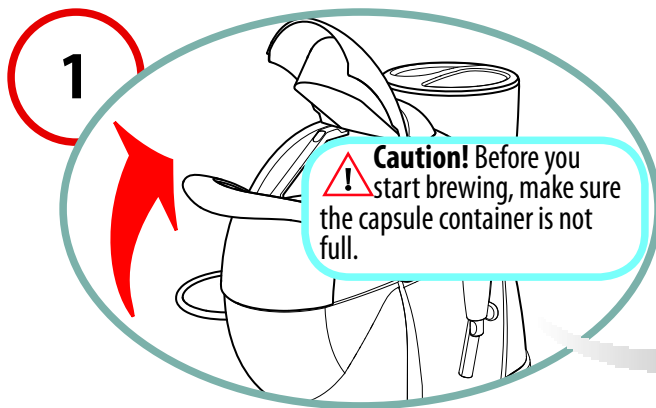


Raise the lever to open the capsule compartment.

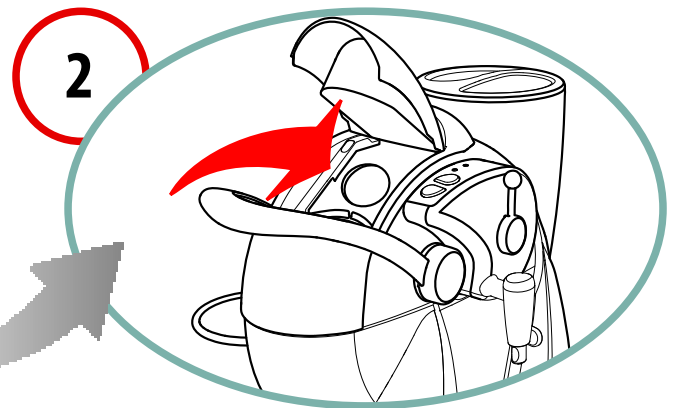


Insert the capsule, pressing it gently into place.

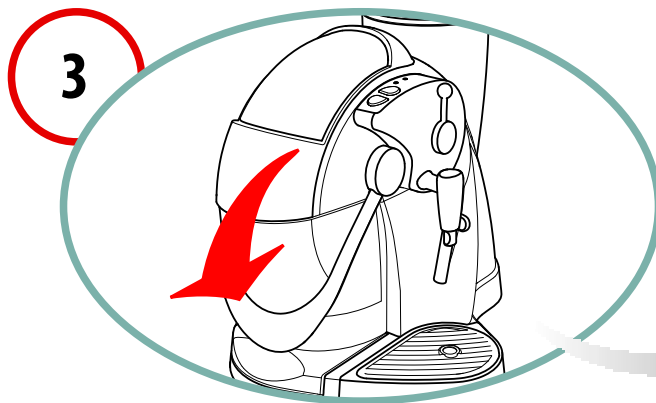


Close the lever firmly.

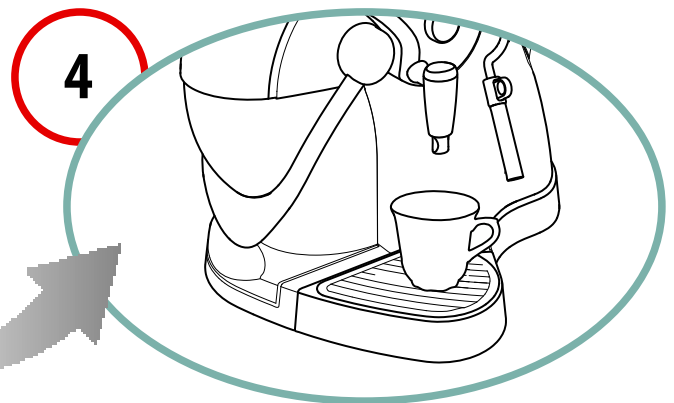

Place a cup or mug under the coffee dispensing spout.

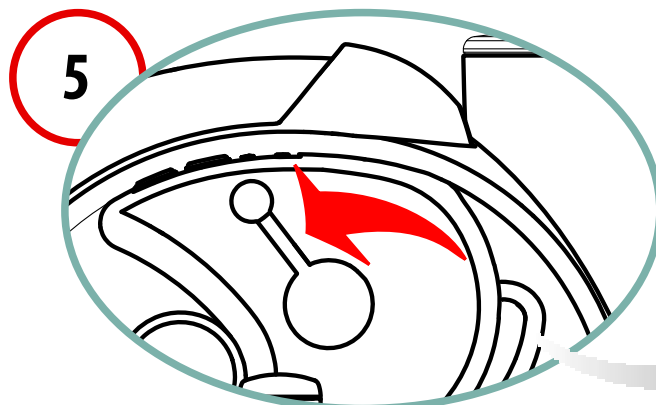


Turn the control lever to the coffee position.

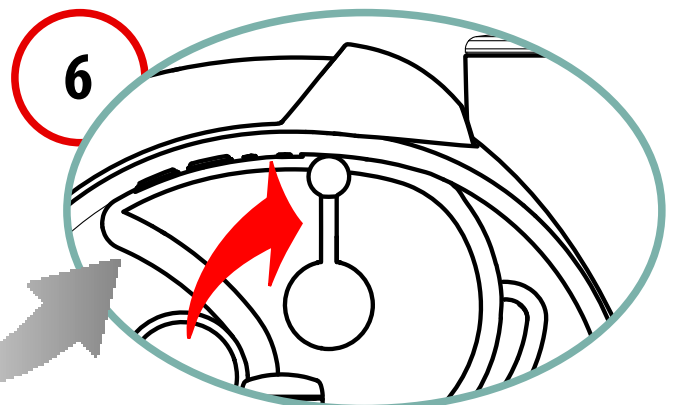


When the desired quantity has been dispensed, set the control lever back to its central position (0).

5 Dispensing filter coffee

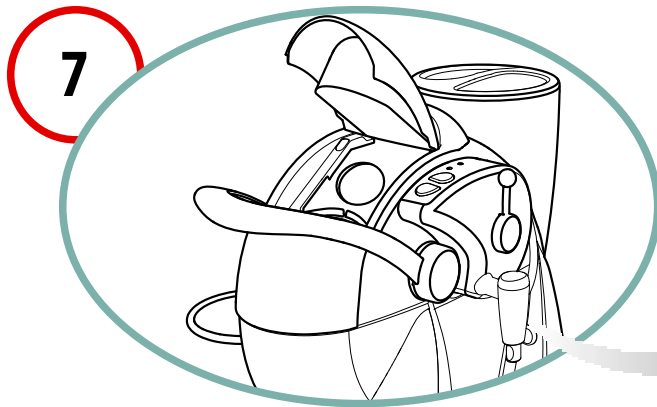


Raise the lever to eject the used capsule into the drawer.

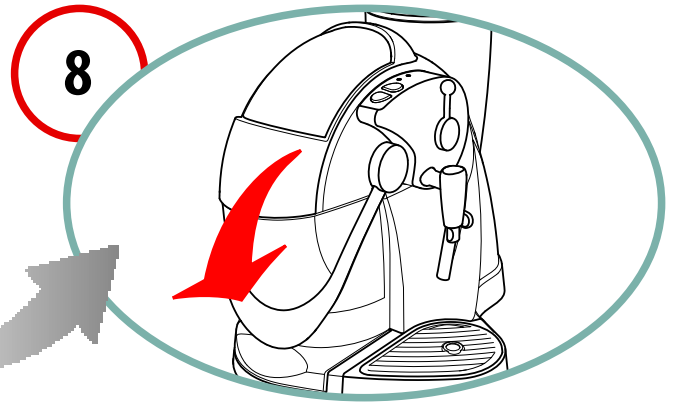


Close the lever.

5 Dispensing filter coffee

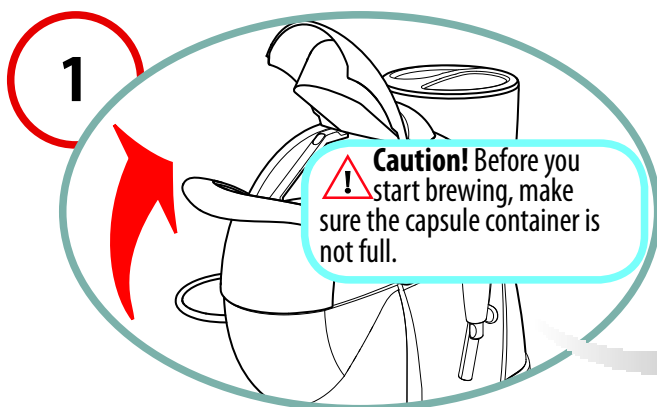


Caution! Before you start brewing, make sure the capsule container is not full.


Raise the lever to open the capsule compartment.

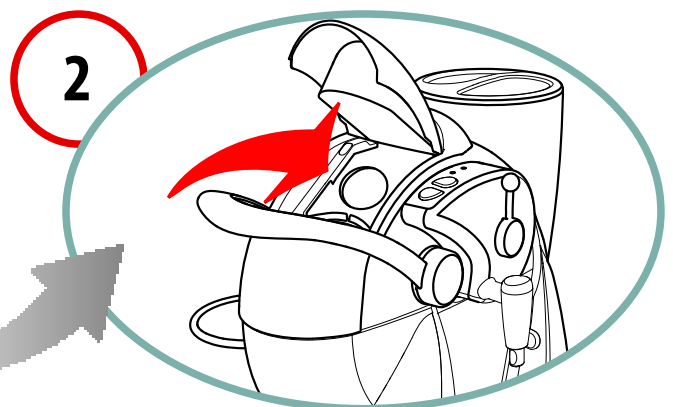


Insert the capsule, pressing it gently into place.

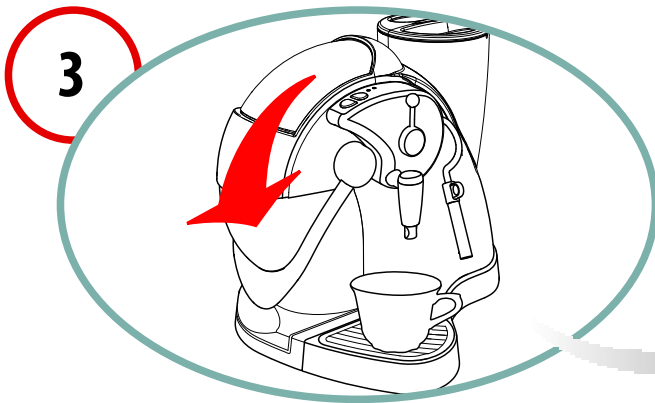


Close the lever firmly.
Place a mug under the coffee dispensing spout.

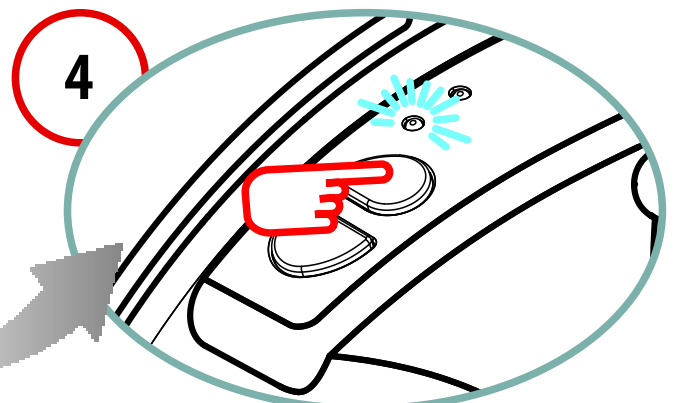


Press the filter coffee button; the **filter coffee** indicator light is lit steadily in BLUE.

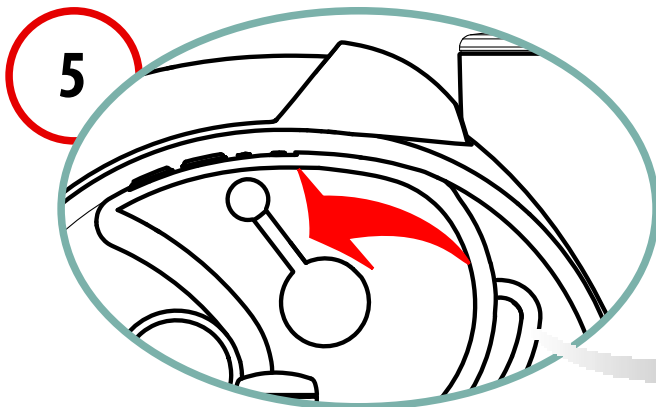


Turn the control lever to the coffee position.

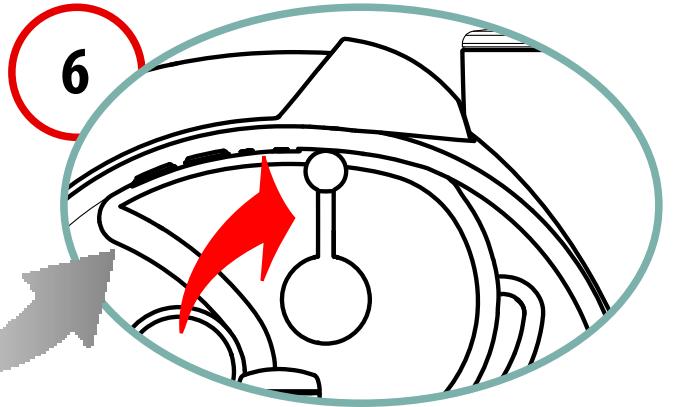

When the desired quantity has been dispensed, set the control lever back to its central position (0).

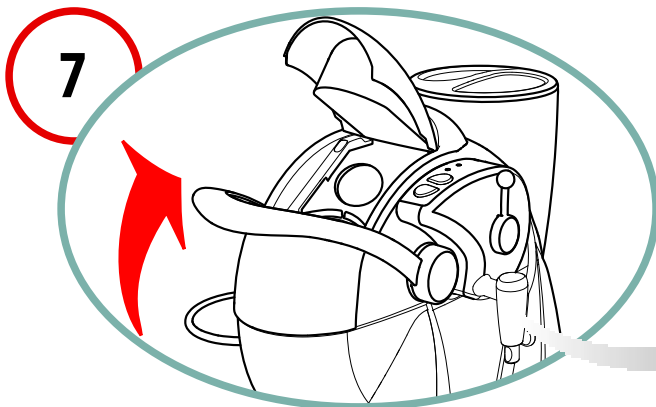

Raise the lever to eject the used capsule into the drawer.

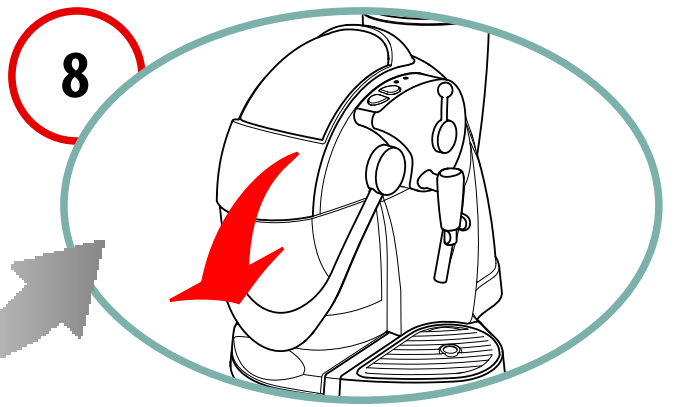

Close the lever.

Capsules for preparing beverages such as **tea, chamomile tea, filter coffee, etc. are available.**

When using them, proceed as directed in

**Chapter 5,
"Dispensing filter coffee".**

To prepare beverages using **barley capsules, cocoa drinks, etc.**, proceed as directed in

**Chapter 4,
"Dispensing coffee".**




NOTE:


Traces of the product just dispensed may remain in the circuit of the machine. When switching from one product to another, in order to fully enjoy the flavour of the beverage we suggest rinsing the machine by pressing the coffee button as if to dispense a coffee without inserting a capsule.




CAUTION! During preparation there may be some brief splashes of hot water and the steam dispensing tube reaches very high temperatures. Danger of scalding! Handle the tube only by means of the special rubber grip. After each use, clean the tube with a damp cloth.

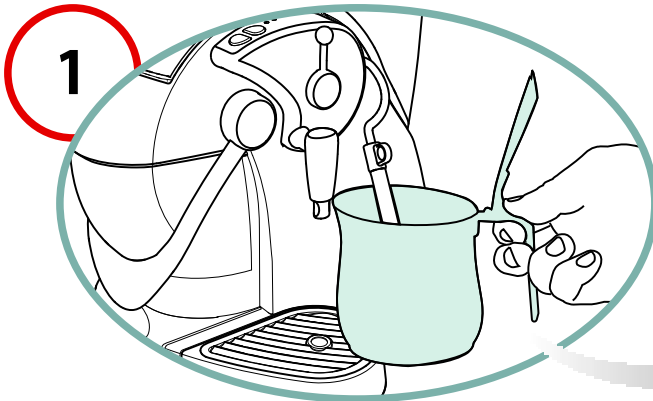


Place a metal container under the hot water dispensing pipe.

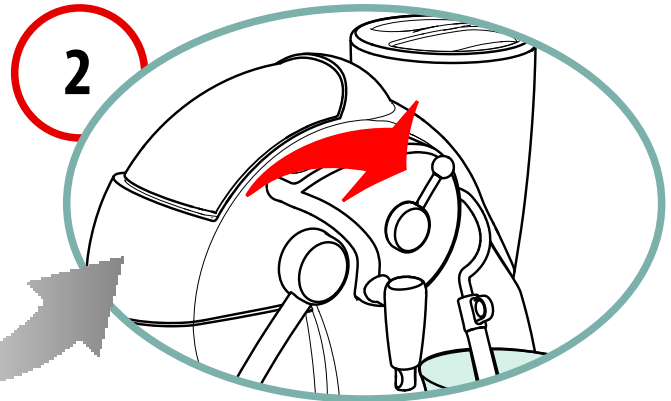

Turn the control lever all the way to the right. Start dispensing hot water.

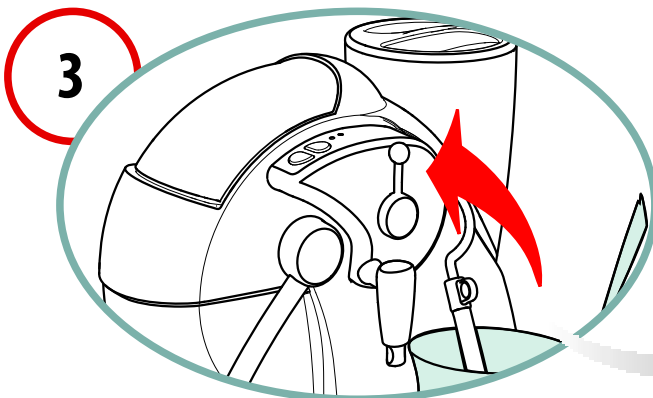


To stop dispensing, turn the lever to the left, returning it to a central position.

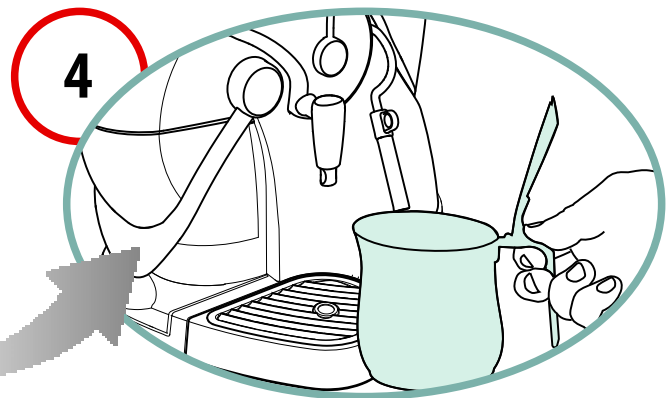


Remove the container of hot water.




CAUTION! During preparation there may be some brief splashes of hot water and the steam dispensing tube reaches very high temperatures. Danger of scalding! Handle the tube only by means of the special rubber grip. After each use, clean the tube with a damp cloth.

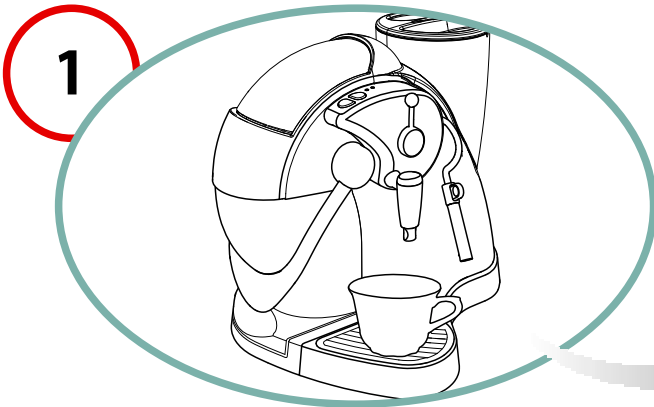


Dispense the coffee as desired (see Ch. 4).

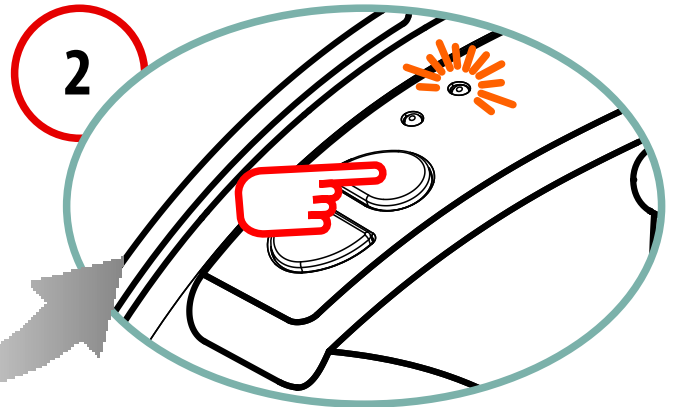


Press the steam button; the **multifunction** indicator light blinks in ORANGE. After approximately 1 minute, the appliance will be ready to dispense steam. The **multifunction** indicator light is lit steadily in ORANGE.

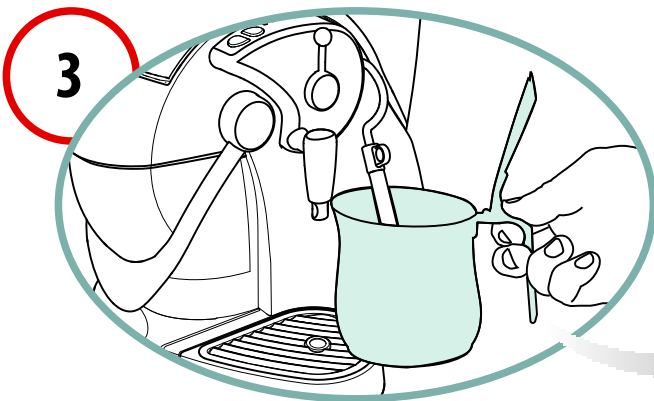


Half-fill a metal container with milk. Submerge the steam tube in the container.

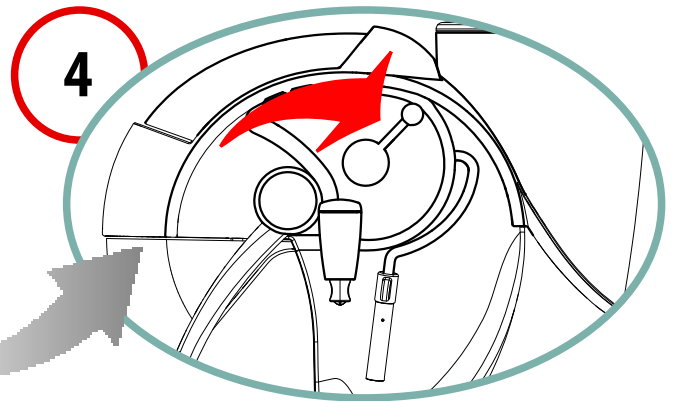

Turn the control lever to the steam position to start dispensing steam.

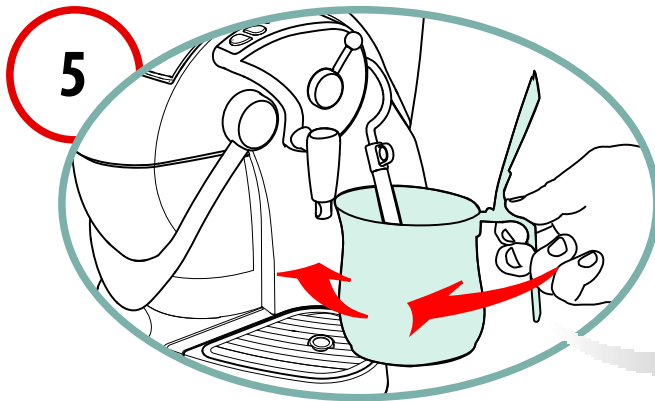


Move the container in a slight circular motion to ensure the milk is uniformly heated.

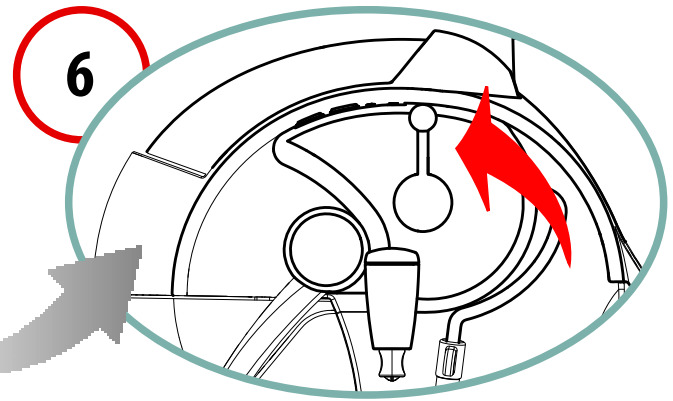

When preparation is complete, return the lever to central position.



Pour the heated and frothed milk into a coffee cup.

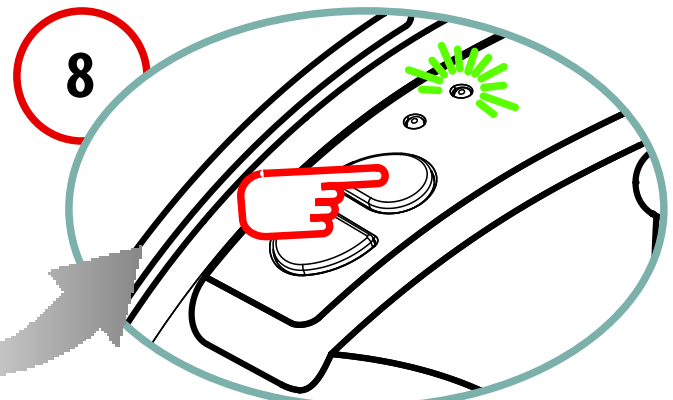


Press the steam button; the **multifunction** indicator light blinks rapidly in GREEN. The machine is in its cooling phase. When the **multifunction** indicator light is lit steadily in GREEN, the machine is ready to use.




NOTE:


To speed up machine cooling, we recommend dispensing hot water into a metal container for a few seconds. This cleans out the steam dispensing tube.

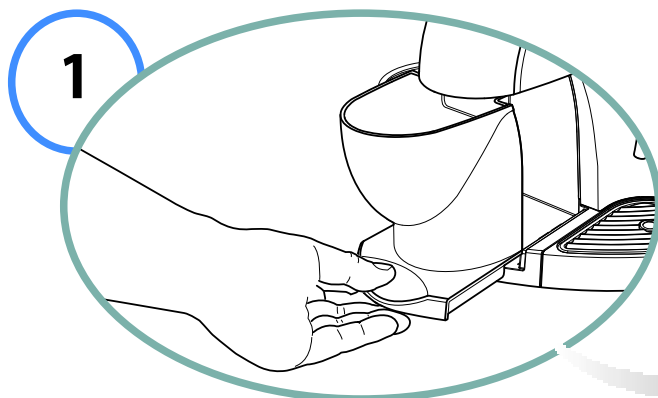


Take out the used capsule drawer; empty and rinse it.

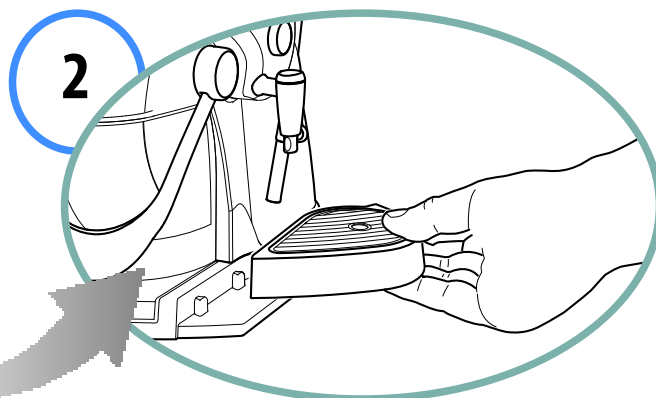

Remove the drip tray and the grid. Empty the drip tray. Wash the parts with fresh water.

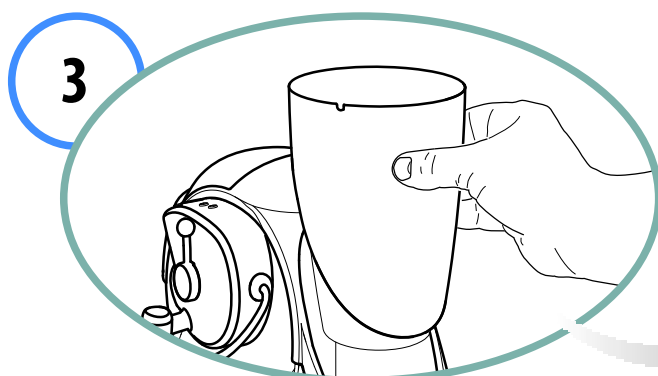

Remove the water tank. Empty and rinse out the tank. The water tank is NOT dishwasher safe.

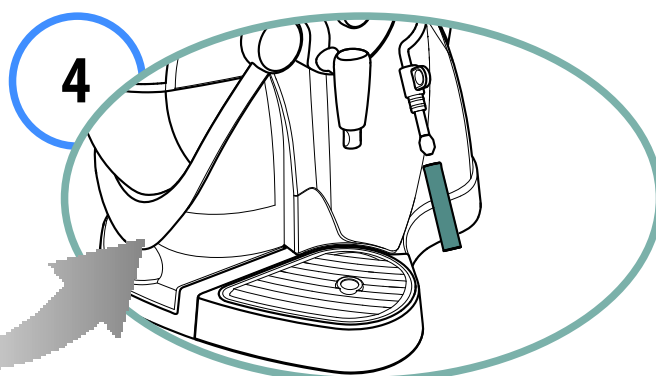

Remove the outside of the steam dispensing tube and wash it in hot water to remove any milk residue. Clean the inside with a damp cloth.



Use a soft cloth and a neutral detergent to clean the surfaces of the appliance.



The plastic parts of the appliance are not dishwasher safe.

Descale the appliance regularly in accordance with the water hardness level.

Water hardness	French degrees	German degrees	Descale after ... cups
low	0 - 18°F	0 - 10°dH	1200
medium	18 - 36°F	10 - 20°dH	600
high	36 - 54°F	20 - 30°dH	300




CAREFULLY read the directions for use on the descaling agent packaging. Avoid contact with eyes, skin and machine surfaces. Switch the appliance off during descaling, and do not lift the lever.


A person must be present during the operation.

Do not use vinegar: it could damage your appliance!


It is advisable to use the Caffita System descaling agent. It has been studied to comply with the technical characteristics of the appliance, in full observance of consumer safety. The descaling agent must be disposed of in compliance with manufacturer instructions and/or with current regulations in force in the country where the appliance is used.

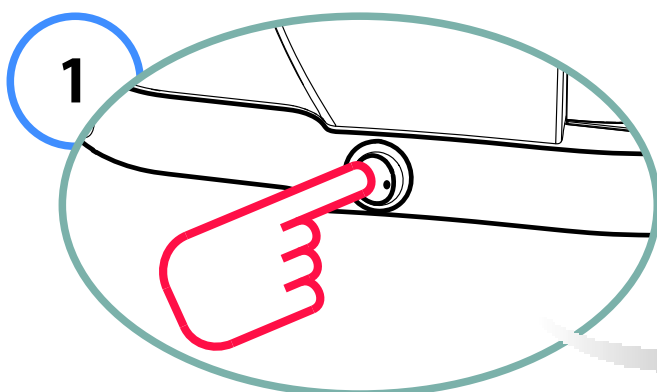

Turn off the machine.

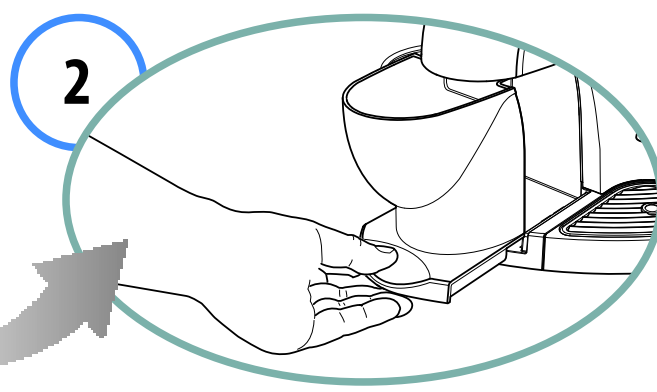


Empty and rinse out the used capsule drawer and drip tray.

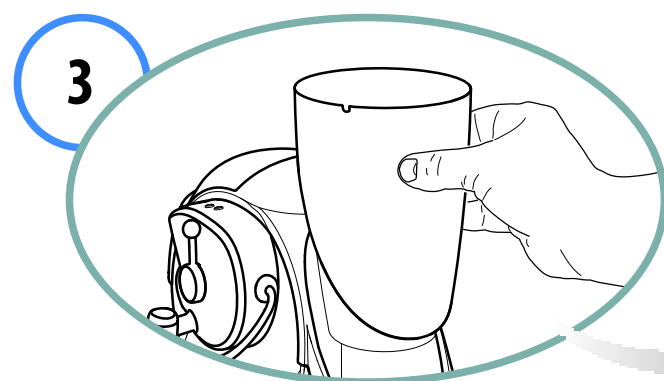


Remove and empty the water tank.




Mix the descaling agent with water as instructed on the package and pour the solution into the tank.

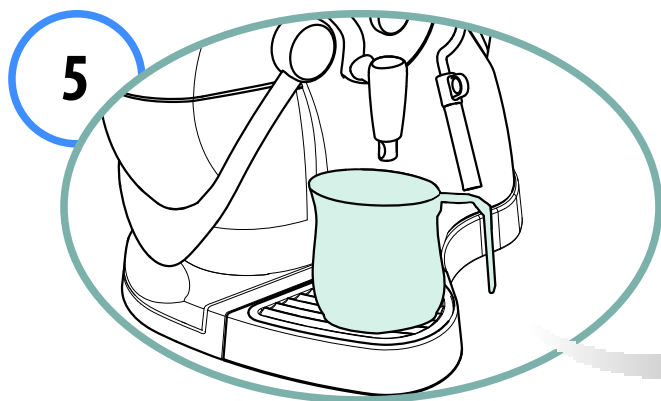


Place a container (at least 250 ml) under the coffee dispensing spout.

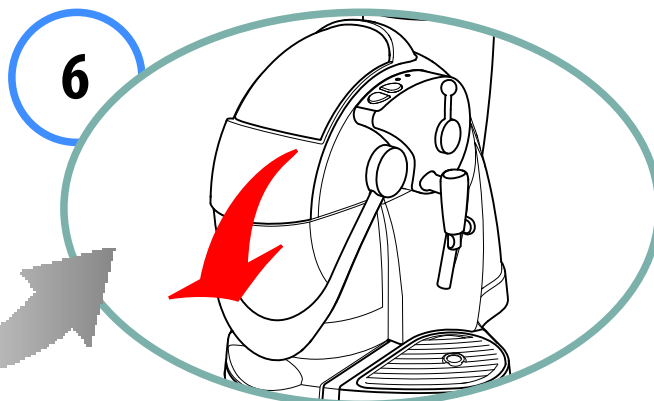


Make sure the lever is lowered.

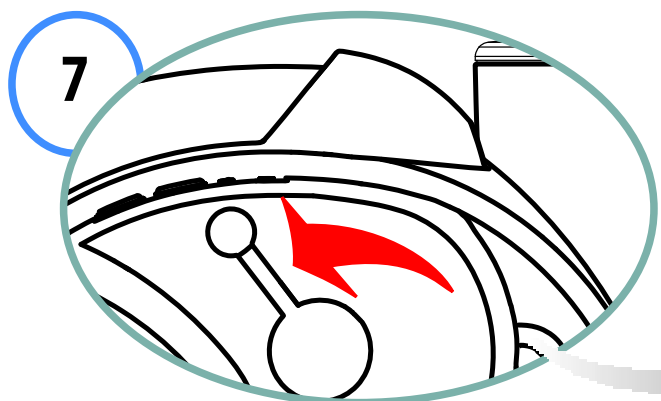


Turn the control lever to the coffee position.

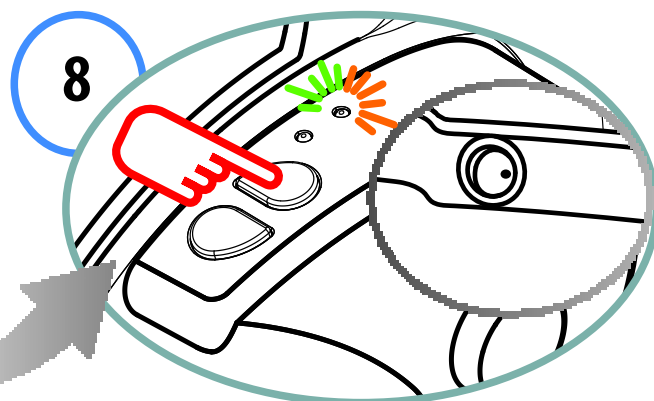


Press the Steam button and switch on the machine; the multifunction indicator light blinks in GREEN and ORANGE alternately.

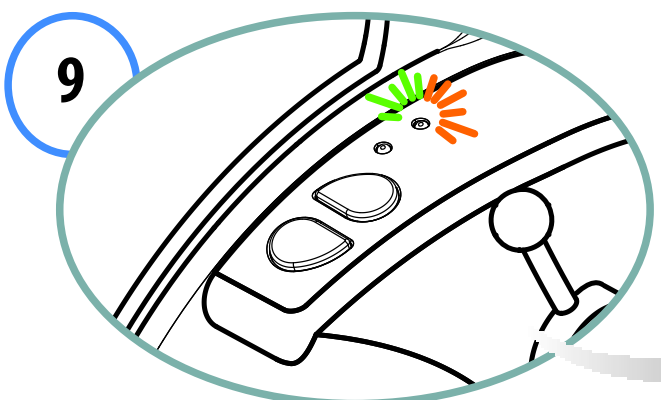


The appliance dispenses the descaling solution at intervals (**5 doses with a 4 minute pause between each one, for a total duration of about 20 minutes**). During this step, **when the buttons must not be pressed**, the **multifunction** indicator light blinks alternately (GREEN and ORANGE).

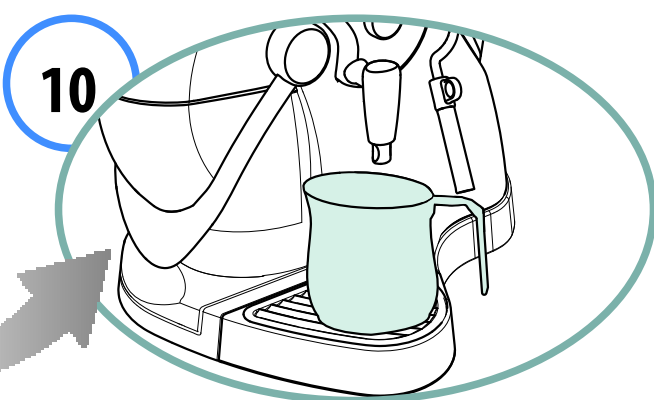


If the container fills up, empty it.

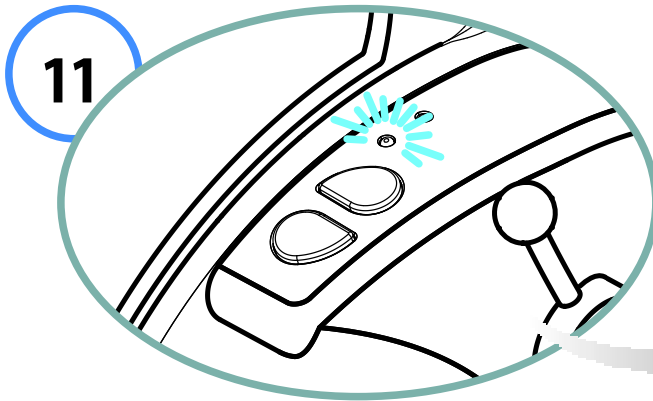


When the cycle is complete, the **filter coffee** indicator light blinks in BLUE.

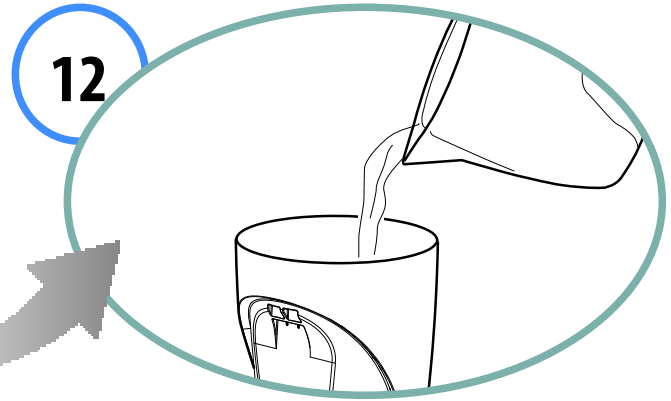


Carefully rinse out the water tank and fill it with fresh drinking water.

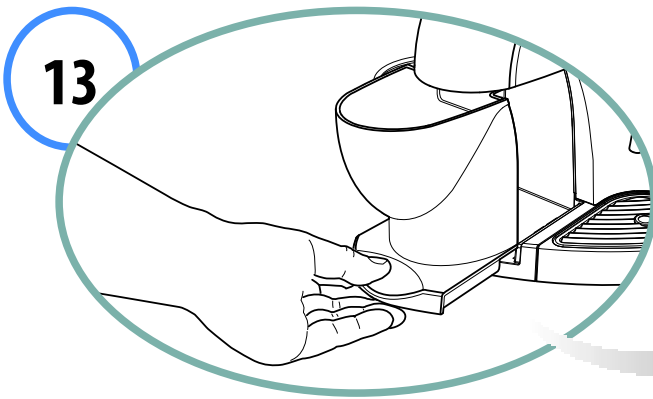


Empty and rinse out the used capsule drawer and drip tray.

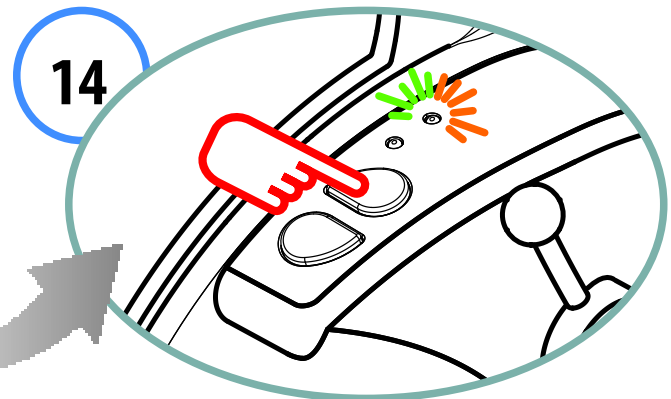


Press the Steam button; the **filter coffee** indicator light switches off and the **multifunction** indicator light blinks in GREEN and ORANGE alternately. The water begins to flow out of the coffee dispensing spout.

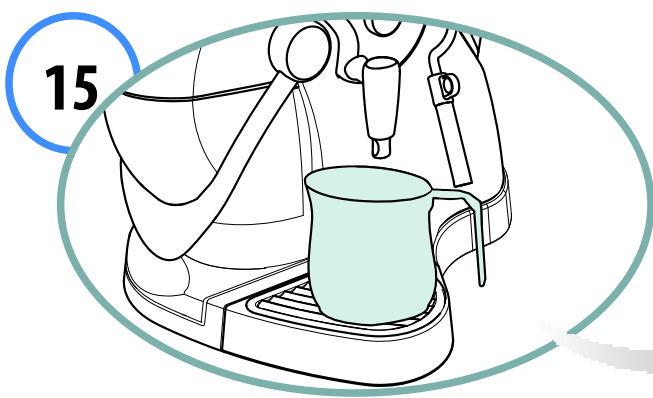


If the container fills up, empty it.

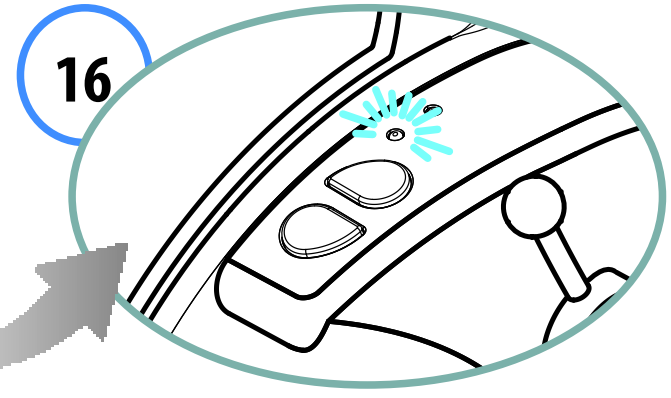


When the cycle is complete, the **filter coffee** indicator light blinks in BLUE.

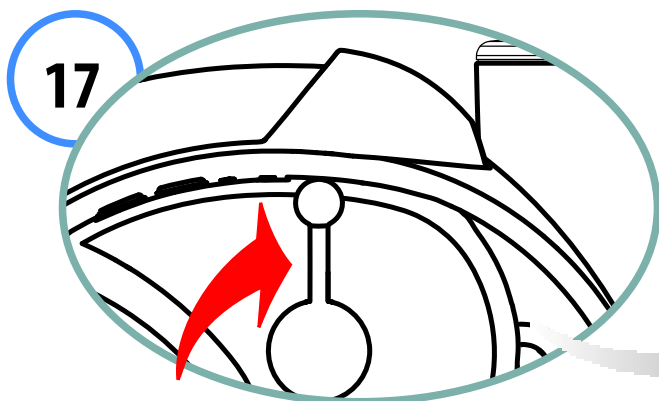


Set the control lever back to the centre (0).

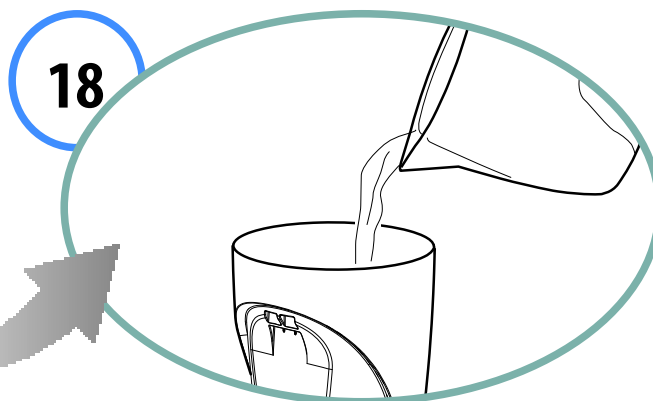

Carefully rinse out the water tank and fill it with fresh drinking water.

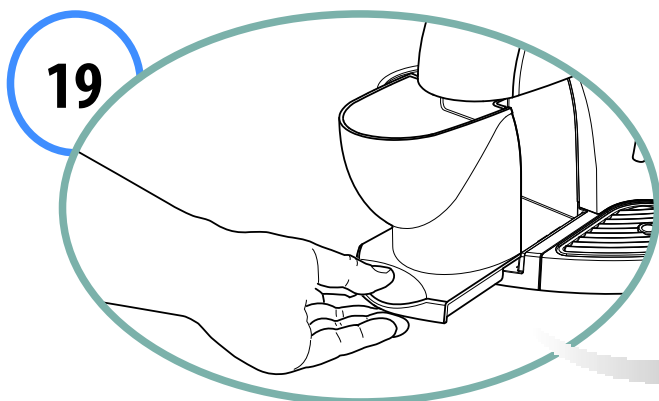

Empty and rinse out the used capsule drawer and drip tray.

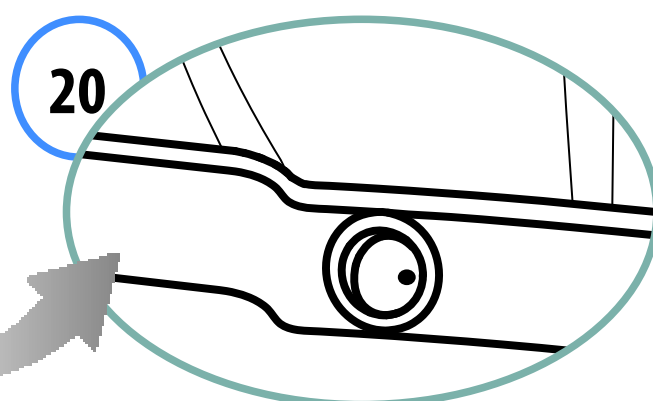


Turn off the machine.




Use a soft cloth and a neutral detergent to clean the surfaces of the appliance.




CAUTION! If the gasket shows signs of wear (small cuts or cracks, deformations, ...) you can replace it easily using the spare gasket supplied in the pack. Perform the following operations only when the machine is cold; contact with the inside surfaces of the machine could cause burns.

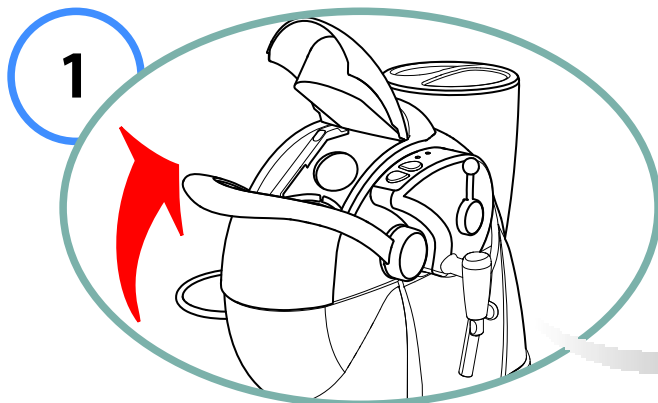


Raise the lever.

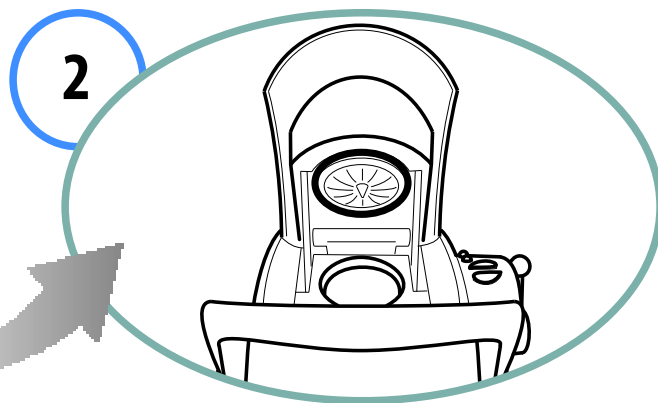


Find the gasket.

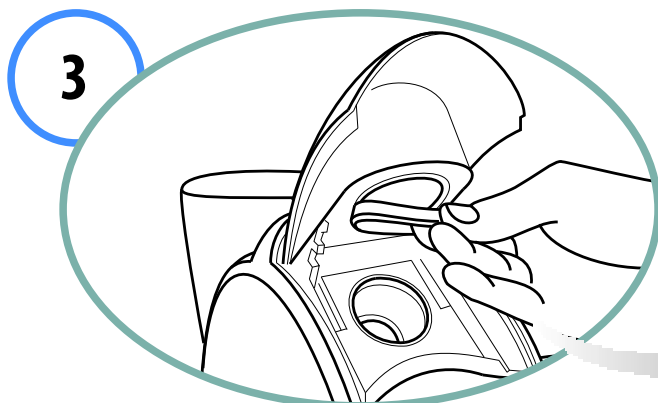

Remove the worn gasket, extracting it if necessary with the aid of a screwdriver.

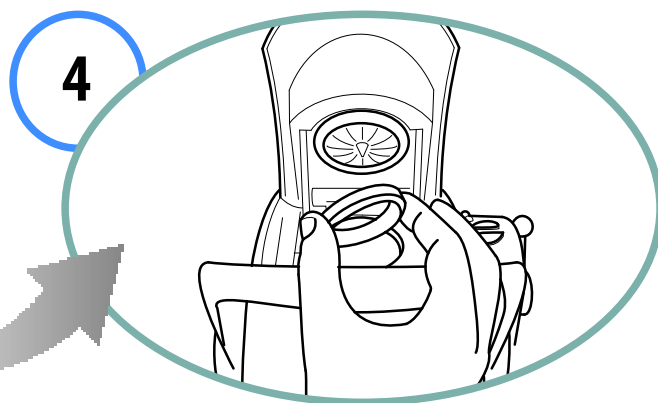



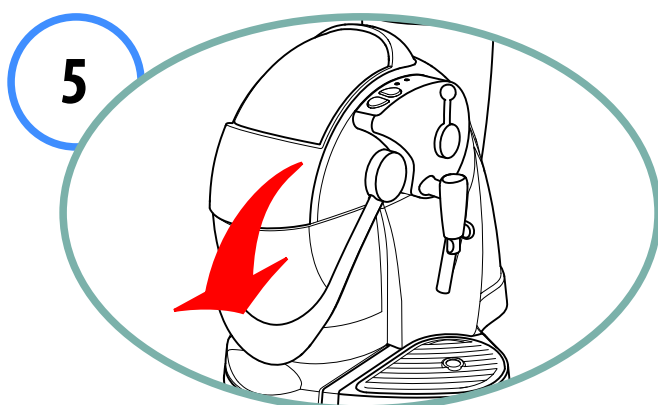






Insert the new gasket, ensuring that it fits snugly in place.



Close the lever.

PROBLEM	CAUSE	SOLUTION
<ul style="list-style-type: none"> - No coffee is dispensed / No water is dispensed 	<ul style="list-style-type: none"> - The water tank is empty, the multifunction indicator light is lit in RED. - The multifunction indicator light is lit in ORANGE; the steam function is activated. - Scale build-up in machine. 	<ul style="list-style-type: none"> - Fill the tank with fresh water. - Press the steam button and wait until the indicator light is lit in green. - Descale, if necessary (see Ch.12).
<ul style="list-style-type: none"> - The coffee is not hot enough. 	<ul style="list-style-type: none"> - Cold cups / mugs. - Scale build-up in machine. 	<ul style="list-style-type: none"> - Preheat cup / mug. - Descale (see Ch.12).
<ul style="list-style-type: none"> - The lever cannot be lowered. 	<ul style="list-style-type: none"> - The used capsule drawer is full. - Capsule stuck inside the machine. 	<ul style="list-style-type: none"> - Empty out the used capsule drawer. - Remove the capsule.
<ul style="list-style-type: none"> - Milk foam not satisfactory. 	<ul style="list-style-type: none"> - Milk not suitable. 	<ul style="list-style-type: none"> - Use skimmed or semi-skimmed milk at refrigerator temperature.
<ul style="list-style-type: none"> - Alarm. 	<ul style="list-style-type: none"> - The multifunction indicator light is lit in RED. - The multifunction indicator light is blinking in RED. - The multifunction indicator light is blinking in ORANGE and GREEN. - None of the indicator lights are on. 	<ul style="list-style-type: none"> - Fill the tank with water. - Electronics fault. Turn off the machine, then turn it back on. - If the problem persists, contact an Authorised Service Centre. - The appliance is in its descaling phase. - Make sure the appliance is connected to the electricity mains. - If the problem persists, contact an Authorised Service Centre.

	See the data plate on the bottom of the machine
P	Max. 15 bar
	< 70dB A
	About 6 kg
	2 litres
	5°C - 15°C
	 220 mm  290 mm  332 mm

The materials and objects in contact with food products comply with the requirements of European Regulation 1935/2004.



www.caffitaly.com

IB0100100 - Rev.01 del 19-01-11